

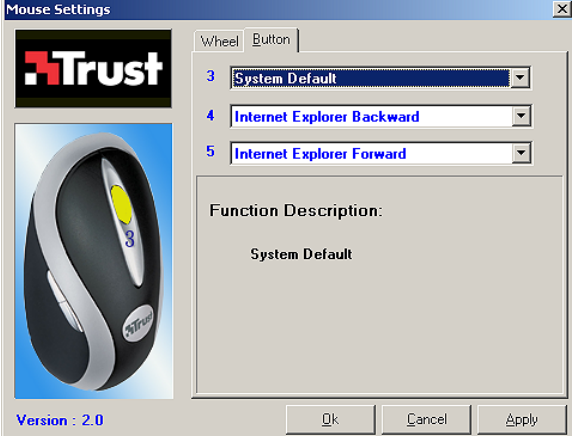


Mouse button configuration program		
1		Go to Start -> Programs -> Trust -> <i>Mouse model</i> -> Easy Mouse Configuration. Or Double click the icon on taskbar
2		<ol style="list-style-type: none"> <li>1. Wheel mode:             <ol style="list-style-type: none"> <li>a. Intelli-Mouse: Windows default, not able to adjust wheel speed</li> <li>b. Enhanced scroll: You can adjust scroll per line(s) or per page</li> </ol> </li> <li>2. Wheel speed: to control how system reacts per scroll</li> </ol>
3		Set a function of 3rd, 4 <sup>th</sup> and 5th button from the pull-down list
4		Click on OK when finish